

High Gloss Photo Paper Use & Care Instructions

Printworks High Gloss Photo Paper produces photo lab quality prints with vibrant colors and sharp detail. The spectacular, high-shine finish is perfect for framing. And it's instant dry so this photo paper is ideal for printing your photos quickly without the risk of smudges or smears.

Handling and storage



- Only print this photo paper with an inkjet printer.
- Always handle photo paper by the edges to avoid getting fingerprints on the glossy printable surface.
- Keep paper away from moisture and high humidity.
- Store photo paper flat and in package until ready to use.
- To extend the life of your prints, do not expose printed or unprinted paper to bright lights or direct sunlight for long periods of time. Ultra-violet rays have damaging effects on any photo paper.
- Before framing or placing photos in an album, for best results, wait 24 hours.

Test print

We recommend printing your image on a plain piece of paper first to ensure desired size and orientation. Fast or Draft mode may be used to conserve ink.

Loading photo paper into your inkjet printer

Load photo paper into paper tray according to your printer's manual. Some printers allow stack feeding, but we recommend single sheet feeding.

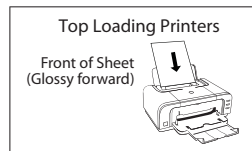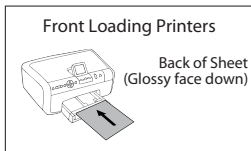

Printing your image

1. Select Print.
2. Click the Preferences, Properties or Options button (depending on your printer) from within the Print window.
3. Select 4x6 as your paper size and choose the paper orientation.
4. Refer to the chart below for other important printer settings.

Printer	Media Type	Quality	Other
HP 600, 700, 800, 900, 1000, 1200, 2000 series – HP Photosmart P1000, P1100, P1200, P1300, D7000 series – HP Deskjet 6900 series	HP Premium Photo Paper Glossy	Best	
Canon S200, S300, S400, S500, S600, S800 Series	Photo Paper Pro	Fine	Effects - Auto
Canon S630, Pixma iP4000, iP6000	Glossy Photo	High	
Canon Pixma iP4300	Glossy Photo	Standard	
Epson 400, 600, 800, 900 – Epson Stylus Photo R200	Glossy Photo Paper	Best Photo	High speed off
Epson Stylus Photo 700, 800, 900, 1200 & 2200 R380	Premium Glossy Photo Paper	Best Photo	High speed off
Lexmark 5000, 7000, x3550 and z series	Glossy Photo	High	Natural Color
Kodak 5300, ESP5	N/A	Best	

For brands and models not shown above, refer to your printer manual for instructions on settings for glossy photo papers.