

Soft Gloss Photo Paper Use & Care Instructions

Printworks Soft Gloss Photo Paper has a smooth, low-gloss finish that is perfect for everyday printing, albums and sharing photos with friends and family. It's instant dry so this photo paper is ideal for printing your photos quickly without the risk of smudges or smears.

For best results, read all instructions before proceeding!

Handling and storage

- Only print this photo paper with an inkjet printer.
- Always handle photo paper by the edges to avoid getting fingerprints on the glossy printable surface.
- Keep paper away from moisture and high humidity.
- Store photo paper flat and in package until ready to use.
- To extend the life of your prints, do not expose printed or unprinted paper to bright lights or direct sunlight for long periods of time. Ultra-violet rays have damaging effects on any photo paper.
- For best results, wait 24 hours before framing or placing photos in an album.

Test print



We recommend printing your image on a plain piece of paper first to ensure desired size and orientation. Fast or Draft mode may be used to conserve ink.

Loading photo paper into your inkjet printer

Load photo paper into paper tray according to your printer's manual. Some printers allow stack feeding, but we recommend single sheet feeding.

Printing your image

1. Select Print.
2. Click the Preferences, Properties or Options button (depending on your printer) from within the Print window.
3. Choose the paper orientation.
4. Refer to the chart below for other important printer settings.

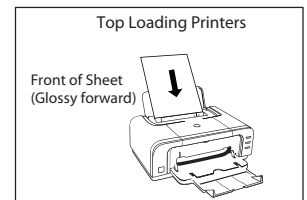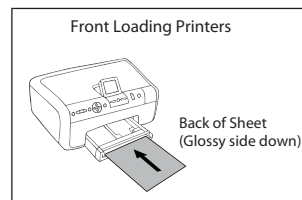

Printer	Media Type	Quality	Other
HP 600, 700, 800, 900, 1000, 1200, 2000 series – HP Photosmart P1000, P1100, P1200, P1300, D7000 series – HP Deskjet 6900 series	HP Photo Paper	Best	
HP Photosmart D7460 & 8250	HP Everyday Photo Paper Semi-gloss	Best	
Canon S200, S300, S400, S500, S600, S800 Series	Plain Paper	Standard	
Canon S630, Pixma iP1500, iP2000, iP3000, iP4000, iP5000, iP6000, iP8000, iP9000 Series	Glossy Photo Paper	High	
Epson 400, 600, 800, 900 – Epson Stylus Photo R200	Photo Quality Glossy Paper	Best Photo	High Speed Off
Epson Stylus Photo 700, 800, 900, 1200 & 2200, R380	Premium Photo Paper Semi-gloss	Best Photo	High Speed Off
Lexmark 5000, 7000, x3550 and z series	Photo/glossy	Photo	
Kodak 5300, ESP5	N/A	Best	

For brands and models not shown above, refer to your printer manual for instructions on settings for Semi-gloss photo papers.